


Bridgemate shows "Press OK to test LCD" or "Factory Test Mode"

This text ('Factory Test Mode' or 'Press OK to test LCD') is part of the Bridgemate internal test mode. To exit this test mode, press the following four keys in this order on the first screen that appears after activating the Bridgemate:

- 2
- 5
- NT
- diamond

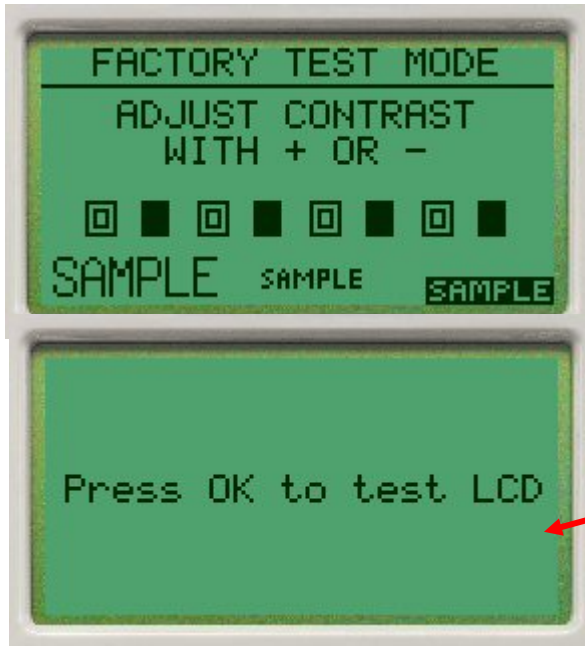

If your Bridgemate shows FACTORY TEST MODE after activation, press these four keys on this screen.



If your Bridgemate's first visible screen after activation is "Press OK to test LCD," then press these four keys on this screen:



The Bridgemate will now return to normal operation mode.