

Driver installation for Bridgemate III server

Summary

Before the Bridgemate III server can be recognized by the Windows operating system, the driver included in this article page must be installed. This driver contains a digitally signature signed by Bridge Systems BV. This driver is also installed by the latest version of Bridgemate Control Software.

Requirements

The following operating systems are supported by this driver:

- Windows 10 (64 bit)
 - Windows 11 (64 bit)
-

Procedure

To install the driver:

1. Make sure the Bridgemate III server is not connected to your computer.
2. Download the driver installation package [Digital signed driver for Bridgemate III server](#) to your computer.
3. Open the downloaded file and follow the instructions on the screen to complete the installation of the driver.
4. When the installation has been completed, connect the Bridgemate III server to your computer. Windows should recognize the server automatically and complete the hardware installation.
5. Start Bridgemate Control Software and verify the connection status of the server.