

Pagers



Up button
Down Button
Function Button
Exit Button



Exit button
Up button
Down button
Function button

To turn on: Press and Hold the Exit Button.

Press **Function** for menu: Set time and alarm – Alert mode – Turn pager off – Escape
Use **Up** or **Down** to scroll. Press **Function** to save → then **Exit** button

Programming Pager ID (Address): Press **Exit & Up** for a few seconds. Password is **0000**
Press **Down** 4 times to step thru password to display pager IDs.

Press **Up** or **Down** to scroll through table. Use **Function** or **Exit** to toggle between ON or OFF for the desired ID(s). Then, press **Up** or **Down** repeatedly to exit the programming menu and

- Select **PROGRAM** → **Function** to save
- Select **EXIT** → **Function** to exit.

A:	[ON]	0000011
B:	[OFF]	0000022
C:	[OFF]	0000033
D:	[OFF]	0000044
E:	[OFF]	0000055
F:	[OFF]	0000066
G:	[OFF]	0000077
H:	[OFF]	0000088

There may be a **Choose alert** menu which is only available when **Audible alert** is enabled in **Alert mode**. The standard setting is **Vibrate only**, so **Choose alert** might not be available when the pager is switched on.

Messages initially display for about 6 seconds & are marked unread. To view messages press **Exit**. If the screen is blank, press **Program** → **Exit** or press **Exit** twice.


Each black triangle ▲ represents a message. Message status can be:

- Flashing triangle = Unread message
- Non-flashing triangle = message read

Messages remain on the pager for 10 minutes. Each message more than 10-minutes old is deleted from the pager

To turn the pager off: ▶ Press **Function button**, and then **Up** or **Down** button
▶ Scroll to “Turn pager off” ▶ Press the **Function** button twice.

180216

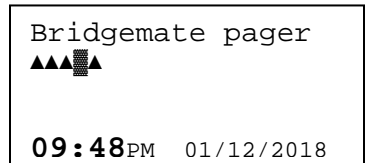

Pagers



Up button
Down Button
Function Button
Exit Button



Exit button
Up button
Down button
Function button

To turn on: Press and Hold the Exit Button.

Press **Function** for menu: Set time and alarm – Alert mode – Turn pager off – Escape
Use **Up** or **Down** to scroll. Press **Function** to save → then **Exit** button

Programming Pager ID (Address): Press **Exit & Up** for a few seconds. Password is **0000**
Press **Down** 4 times to step thru password to display pager IDs.

Press **Up** or **Down** to scroll through table. Use **Function** or **Exit** to toggle between ON or OFF for the desired ID(s). Then, press **Up** or **Down** repeatedly to exit the programming menu and

- Select **PROGRAM** → **Function** to save
- Select **EXIT** → **Function** to exit.

A:	[ON]	0000011
B:	[OFF]	0000022
C:	[OFF]	0000033
D:	[OFF]	0000044
E:	[OFF]	0000055
F:	[OFF]	0000066
G:	[OFF]	0000077
H:	[OFF]	0000088

There may be a **Choose alert** menu which is only available when **Audible alert** is enabled in **Alert mode**. The standard setting is **Vibrate only**, so **Choose alert** might not be available when the pager is switched on.

Messages initially display for about 6 seconds & are marked unread. To view messages press **Exit**. If the screen is blank, press **Program** → **Exit** or press **Exit** twice.

Each black triangle ▲ represents a message. Message status can be:

- Flashing triangle = Unread message
- Non-flashing triangle = message read

Messages remain on the pager for 10 minutes. Each message more than 10-minutes old is deleted from the pager

To turn the pager off: ▶ Press **Function button**, and then **Up** or **Down** button
▶ Scroll to “Turn pager off” ▶ Press the **Function** button twice.

180216

